

What to do if...
What to do if...



A tire punctures

P. 596 If you have a flat tire



The hybrid system does not start

P. 610 If the hybrid system will not start

P. 115 Immobilizer system

P. 617 If the vehicle 12-volt battery is discharged



The shift lever cannot be moved out

P. 612 If the shift lever cannot be shifted from P



The engine coolant temperature gauge enters the red zone

P. 620 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 613 If you lose your keys



The 12-volt battery runs out

P. 617 If the vehicle 12-volt battery is discharged



The doors cannot be locked

P. 61 Side doors

P. 64 Back door



The horn begins to sound

P. 117 Alarm



The vehicle is stuck in mud or sand

P. 625 If the vehicle becomes stuck



A warning light or indicator light comes on

P. 566

If a warning light turns on or a warning buzzer sounds...



nWarning lights



Brake system warning light

or

BRAKE

P. 566



Malfunction indicator lamp

or



P. 567



Brake system warning light

P. 567



Driver's seat belt reminder light

P. 568



"ABS" warning light

or

ABS

P. 567



Front passenger's seat belt reminder light

P. 568



Master warning light with warning message

P. 568



Low fuel level warning light

P. 568



Electric power steering system warning light

P. 567



SRS warning light

P. 567



Pre-collision system warning light

P. 567



Open door warning light

P. 568



Tire pressure warning light

P. 568



Charging system warning light

P. 566